

CAWSS QUICK REFERENCE

6. Adjust this wireless mic volume last so coach can be heard over the music. Reduce level if feedback.

1. Bluetooth volume control. Turn phone volume up 3/4 of the way, then adjust this control until the LED input level lights flash +3 on the loudest peaks. Do not allow red light to flash.

1. If music is on USB drive or SD card, then adjust this volume control until the LED input level lights flash +3 on the loudest passages of music. Do not allow red light to flash.

3. Adjust this volume control until the air speaker is at desired volume.

4. Repeat step 1 as each new song is played as necessary to keep the LED input level lights flashing +3 on the loudest passages of music.

5. Keep BASS and TREBLE knobs straight up. If song sounds boomy, then reduce BASS 1 or 2 positions. If song sounds dull, then increase TREBLE control 1 or 2 positions.

Leave the reverb and voice ducking OFF

Connect Lubell AC202C "gray box", then connect Lubell LL916C underwater speaker to the gray box.

2. Adjust this volume control until the underwater speaker is at desired volume.

