

Lubell Labs HP150 High-pass Filter




**INPUT** **OUTPUT**

Connect input side of HP150 filter to function generator, CD, DAT, etc., having output impedance of 1000 ohms or less.

Connect output side of HP150 filter to amplifier having input impedance of 40 k ohms or higher.

**Peavey IPA300T Connections**

Plug HP150 filter into mating unbalanced phono INPUT jack on rear of IPA300T amplifier.

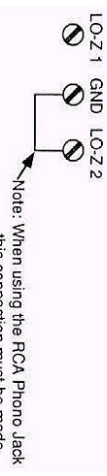

Engage SUBSONIC and SPS switches on front panel.

1 Vrms INPUT = 50 Vrms OUTPUT (1KHz)

Connect LL-9162 black wire to COM speaker terminal. Connect LL-9162 white wire to 3A inline fuse, 7.5 ohm series resistor, then to 8 OHM speaker terminal.

NOTE: Jumper must be installed between 4 ohm and XFMR speaker terminals on rear of IPA300T.